RECONDITIONING MANUAL



Parade

<u>^</u>

To secure that the walking-aid will function safely for the user, once per year review of the walking-aid should be done. Therefore is the following interventions recommended.

☐ Cleaning

Regular cleaning with a mild cleanser is recommended. Machine washing, 60 degrees for 10 minutes. can be used. Avoid using a pressure washer directly to the bearings. **Note!** Do NOT use thinner, petrol or other solvents.

☐ Post treatment

After washing, all connections, tight spaces and drainage holes should be blown dry and sprayed with thin oil. If degreaser is used, should the moving parts be lubricated.

☐ The Paint

Control damages to the paint. To prevent corrosion, improve scratches. Touch-up paint can be ordered from Human Care AB.

\square Pipe frame

Control weldings and screw attaches. If the corrosion is extensive shall the rollator be replaced.



Handle on rollators after Ian 22, 2015



Handle on rollator prior Jan 22, 2015

☐ Handle

Must be fixed. Make sure the handle pipes can be pushed down to the chassis. Change the grip if needed.

Note: Rollators with production date after Jan 22, 2015 have handle kit with part no 89055. Rollators produced earlier can be upgraded with 89055 (see spare part list and drawing).

☐ Brakes

Control that both brakes and parkingbrakes are working. Wires should be intact and stapped to the chassis.

☐ Wing nut

Control function.

Reflectors

Make sure the reflectors are still there and visible.

☐ CE and MD-marking

Make sure that the CE and MD-marking is still there and readable.

☐ Wheels

Make sure the wheels are not worn-out and are spinning easily without any noice.

☐ Lubrication

Gatebushings and hinges should be working without any noice. Lubricate when needed.

☐ Front forks

Make sure that the ball bearings is firmly attached. Check the front fork inertia by allowing the wheel to swing between 3 and 9 o'clock. Both wheels shall swing 3 to times with max 2 swings difference between each wheel. Check that the set screw above the front fork is fully screwed in.

☐ Folding mechanism

Should be intact and the locking should function.

☐ Seat

Make sure the seat is kept in place and screws are tightened.

☐ Stability

Control that all wheels are steadily on the ground and that there are no chassis distortion.

☐ Test driving

Make a final control by test driving.



RECONDITIONING MANUAL



Note!

Recondition must be done by a person how has good knowledge about how the job should be performed. An incorrect performed recondition could result an accident/incident. Don't hesitate to contact your retailer if questions come up.

To secure safe usage of the product, only original parts should be used, these have been developed and tested against current product standards. It is only with original parts that the warranty and CE labeling is valid.

If the corrosion is more than a film of rust the rollator shall be discarded and return for recycling.


Intended use

The rollator should only be used as support whilst walking or as seating whilst stationary. Do not alter the rollator yourself.

Product number:
Owner:
Notes:
Attended by:
Place and date:

Spareparts list

No	Designation	Quantity	Art. no	Other information
	Back wheel kit	_	50933	
I	Back wheel	1		Complete with bearing and distance
2	Locking nut	1		tube.
3	Cover	1		
	Front wheel kit		50934	
4	Front wheel	1		Complete with bearing and distance
5	Locking nut	1		tube.
6	Pin bolt	1		
7	Wing nut complete		50937	Lubricate the wing nut when needed
	Wing nut	1		
	Screw	1		
	Washer	1		
8	Handle Cobra right	I	00022	Until 2015-01-21
9	Handle Cobra left	I	00021	Until 2013-12-31
10	Handle ERGO	I	20-024	From 2015-01-22
П	Screw and nut handle		50935	Screws and nuts must be exchanged
	Screw	3		when disassembling. The shorter nu
	Nut 22mm	2		shall be assembled in the middle of
	Nut 21,5mm	I		the handle.
12	Handle kit	I	89055	For left and right
13	Gate lock kit	I	10-018	
	Gate lock	I		
	Screw to gate lock	4		
	Fold loop	1		
14	Fold loop	I	10-009	
15	Wire complete		89050	
	Wire housing	I		
	Wire	1		
	Wire lock	I		
	Wire end	I		
16	Reflex	I	00028	
	Locking Snap		73004	

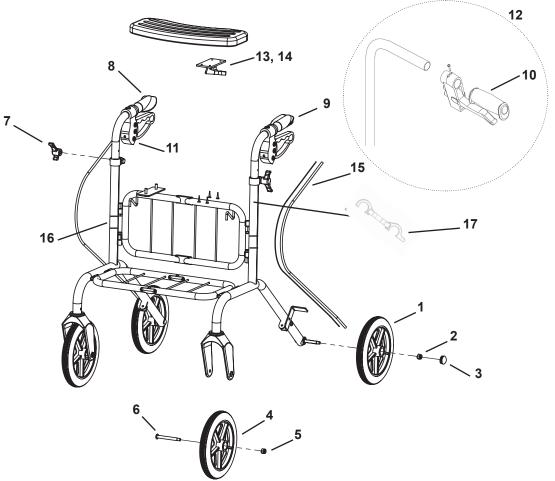

[•] Årstaängsvägen 21B, SE-117 43 Stockholm, Sweden • • Tel. +46(0)8 - 510 132 00 • Fax +46(0)8 - 665 35 10 • www.humancaregroup.com •