




# Fellow Classic

 To secure that the walking-aid will function safely for the user, once per year review of the walking-aid should be done. Therefore is the following interventions recommended.

**Cleaning**

When cleaning the walker it is recommended machine washing, 60 degrees for 10 minutes. When using a pressure washer, do not wash directly to the bearings. In addition to machine washing, regular cleaning with a mild cleanser is recommended. **Note!** Do NOT use thinner, petrol or other solvents.

**Post treatment**

After washing, all connections, tight spaces and drainage holes should be blown dry and sprayed with thin oil. If degreaser is used, should the moving parts be lubricated.

**The Paint**

Control damages to the paint. To prevent corrosion, improve scratches. Touch-up paint can be ordered from Human Care HC AB.

**Pipe frame**

Control weldings and screw attaches. If the corrosion is extensive shall the rollator be replaced.



**Handle**

Must be fixed. Make sure the handle pipes can be pushed down to the chassis. Change the grip if needed.

**Brakes**

Control that both brakes and parkingbrakes are working. Wires should be intact and stapped to the chassis.

**Stability**

Control that all wheels are steadily on the ground and that there are no chassis distortion.

**CE-marking**

Make sure that the CE-marking is still there and readable.

**Wing nut**

Control function.

**Reflectors**

Make sure the reflectors are there and visible.

**Hub caps**

Make sure that they are not missing

**Wheels**

Make sure the wheels are not worn-out and are spinning easily without any noise.

**Fork hub och locking washer**

Make sure that the fork hub and locking washer are attached. **Note!** The locking washer must be replaced when disassembling (for rollators with older front fork design).

**Front forks**

Make sure that the bearings is firmly attached. Check the front fork inertia by allowing the wheel to swing between 3 and 9 o'clock. Both wheels shall swing 2 to 4 times with max 2 swings difference between each wheel. The inertia can be adjusted by adjusting the nut on the top under the hub cover (for rollators with new front fork design).

**Seat**

Make sure that the seat is kept in place and the nuts are tightened.

**Folding mechanism**

Should be intact and the locking should function.

**Safety catch**

Check that the safety catch falls of its own weight.

**Test driving**

Make a final control by test driving.



**Note!**

Recondition must be done by a person who has good knowledge about how the job should be performed. An incorrectly performed recondition could result in an accident/incident. Don't hesitate to contact your retailer if questions come up.

When exchanging parts of the rollator, use only Human Care parts to ensure continued CE-validation.

When disassembling a wheel, the wheel nut must be replaced since it contains a self-locking that will be destroyed when disassembling.

If the corrosion is more than a film of rust the rollator shall be discarded and return for recycling.

**Intended use**

The rollator should only be used as support whilst walking or as seating whilst stationary. Do not alter the rollator yourself.

Product number:
Owner:
Notes:
Attended by:
Place and date:

## Spareparts list

No	Designation	Quantity	Art. no	Other information
<b>Front fork and wheel</b>				
1	Fork hub	2	93015075	Until 201209
2	Locking washer	2	93013012	<i>Must be replaced when disassembling.</i>
3	Washer	2	00856	
4	Wave washer	6	93012008	
5	Nylon washer	4	93015026	<i>t=0,8mm</i>
6	Nylon washer	4	93015025	<i>t=2mm</i>
7	Slide bearing with flange	12	930130013	<i>Need no lubrication.</i>
8	Front fork	1+1	200.1010	<i>State right or left.</i>
9	Wheel complete	4	93017025	<i>Complete with slide bearing.</i>
10	Flange nut	2	93011008	<i>Must be replaced when disassembling.</i>
11	Hub	2	93017024	
<b>Front fork and wheel</b>				
12	Fork hub	2	89305	From 201210
13	Locking nut	2	00888	
3	Washer	2	00856	
4	Wave washer	6	93012008	
5	Nylon washer	4	93015026	<i>t=0,8mm</i>
6	Nylon washer	4	93015025	<i>t=2mm</i>
7	Slide bearing with flange	12	930130013	<i>Need no lubrication.</i>
14	Front fork right	1	89310	
15	Front fork left	1	89300	
9	Wheel complete	4	93017025	<i>Complete with slide bearing.</i>
10	Flange nut	2	93011008	<i>Must be replaced when disassembling.</i>
11	Hub	2	93017024	
<b>Brake</b>				
16	Wire complete	2	00891	<i>Complete with adjustment casing.</i>
17	Brake spring	2	AL-10142	
18	Brake gear	2	AL-10139	
19	Nut cover	4	200.1005	
10	Flange nut	6	93011008	<i>Must be replaced when disassembling.</i>
<b>Handle</b>				
20	Complete handle brake, (handle, brake, screws, wire, housing, spring, handle pipes included).			
	Right side		00902	<i>Standard, narrow, wide and high</i>
	Left side		00903	<i>Standard, narrow, wide and high</i>
	Right side		00904	<i>Fellow low</i>
	Left side		00905	<i>Fellow low</i>
<b>Wing nut</b>				
21	Screw	2	00071	
22	Washer	2	000124	
23	Wing nut	2	20-052	<i>Lubricate when needed.</i>

# RECONDITIONING MANUAL

<b>Seat</b>				
24	Seat	1	93015086	
25	Steel screw	5	93010007	<i>Make sure that the screws are tightened.</i>
26	Locking frame complete	1	200.2100	<i>Complete with safety catch.</i>
27	Reflex	3	00028	
	Touch-up paint		F4	
<b>Handle</b>				
28	Grip	2	AL-10153	
29	Screw	8	00897	
30	Knob	2	AL-10159	

