



## Staffan TW



To secure that the walking-aid will function safely for the user, once per year review of the walking-aid should be done. Therefore is the following interventions recommended.

### ☐ **Cleaning**

When cleaning the walker it is recommended machine washing, 60 degrees for 10 minutes. When using a pressure washer, do not wash directly to the bearings. In addition to machine washing, regular cleaning with a mild cleanser is recommended. **Note!** Do NOT use thinner, petrol or other solvents.

### ☐ **Post treatment**

After washing, all connections, tight spaces and drainage holes should be blown dry and sprayed with thin oil. If degreaser is used, should the moving parts be lubricated.

### ☐ **The Paint**

Control damages to the paint. To prevent corrosion, improve scratches. Touch-up paint can be ordered from Human Care HC AB.

### ☐ **Pipe frame**

Control weldings and screw attaches. If the corrosion is extensive shall the rollator be replaced.



### ☐ **Handle**

Must be fixed. Make sure the handle pipes can be pushed down to the chassis. Change the grip if needed.

### ☐ **Brakes**

Control that both brakes and parkingbrakes are working. Wires should be intact and strapped to the chassis.

### ☐ **Wing nut**

Control function.

### ☐ **CE-marking**

Make sure that the CE-marking is still there and readable.

### ☐ **Wheels**

Make sure the wheels are not worn-out and are spinning easily without any noise.

### ☐ **Lubrication**

The front forks shall function without noise, lubricate when needed.

### ☐ **Front forks**

Make sure that the forks swings easily.

### ☐ **Stability**

Control that all wheels are steadily on the ground and that there are no chassis distortion.

### ☐ **Test driving**

Make a final control by test driving.



### Note!

Recondition must be done by a person who has good knowledge about how the job should be performed. An incorrectly performed recondition could result in an accident/incident. Don't hesitate to contact your retailer if questions come up.

When exchanging parts of the trolley walker, use only Human Care parts to ensure continued CE-validation.

When disassembling of a wheel, the wheel nut and pin bolt must be replaced since they contain a self-locking that will be destroyed when disassembling.

If the corrosion is more than a film of rust the trolley walker shall be discarded and return for recycling.

### Intended use

The trolley walker should only be used as support whilst walking. Do not alter the trolley walker yourself.

[illegible]

## Spareparts list

No	Designation	Quantity	Art. no	Other information
1	Rear fork right complete	1	400-019H	<i>Pin bolt and wheel nut must be exchanged when disassemble the fork.</i>
2	Rear fork left complete	1	400-019V	<i>Pin bolt and wheel nut must be exchanged when disassemble the fork.</i>
3	Front fork	2	200-006	<i>Pin bolt and wheel nut must be exchanged when disassemble the fork.</i>
4	Cover lid	2	20-014	
5	<b>Wheel kit</b>	<b>4</b>	<b>89015</b>	<i>Pin bolt and wheel nut must be exchanged when disassemble the wheel</i>
6	Wheel with bearing	4		
7	Pin bolt	4		
8	Wheel nut	4		
9	Brake	2	10-013	
10	Pop nut-brake	2	000139	
11	Starlock-D6	6	00113	
12	Brake spring	2	00131	
13	Adjustment screw	2	10-010	
14	Wire lock	2	10-017	
15	<b>Wing nut complete</b>	<b>4</b>	<b>50937</b>	<i>Lubricate the wing nut when needed.</i>
16	Wing nut	4		
17	Screw	4		
18	Washer	4		
19	RA handle	2	20-064	
20	Handle brake complete	2	10650	<i>Complete with housing, brake handle and pop nut.</i>
21	Handle	2	00020	
22	Walking table-cushion	1	20-053	
23	Cushion bracket right	1	400-023H	<i>Staffan TW high</i>
24	Cushion bracket right	1	400-023V	<i>Staffan TW high</i>
25	Handle pipe	1	400-025	<i>Staffan TW low</i>
26	Housing	2	00013	<i>Staffan TW low</i>
27	Housing	2	00014	<i>Staffan TW high</i>
28	Wire	2	00005	<i>Staffan TW low</i>
29	Wire	2	00003	<i>Staffan TW high</i>

## RECONDITIONING MANUAL

